

Jack™

Variable Back Lock

To adjust back angle, pull lever forward and lean back to desired angle. Push lever back to lock into position. To release for tilt, push lever forward and lean back.

Arm Height


Push trigger up and hold, pull arm up or push down and release trigger to lock.

Maintenance Arm Width

Loosen screws under arm bracket, adjust arm in or out, tighten screws.

Adjustable Seat Depth

Lift lever up and hold, shift seat forward or back, and release lever to lock.

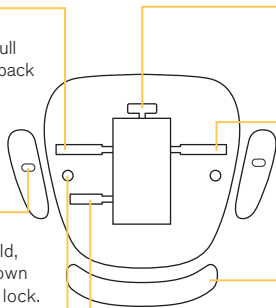

Tilt Tension

To decrease, turn counterclockwise. To increase, turn clockwise.

Pneumatic Seat Height

To raise chair, lift body weight up and pull lever. To lower chair, remain seated and pull lever up.

Back Height

Grab chair back with both hands and slowly pull up to desired height. To lower back, pull up to highest position, and back will drop to lowest position. Reset mechanism by pushing down firmly, then adjust upward.

Note: your chair may not have all the adjustments shown

For more information, visit us at turnstonefurniture.com

product# 939500084

Jack™



turnstone®