

Adjustable Seat Depth

Lift lever up and hold, shift seat forward or back, and release lever to lock.


Available on models TS30602 and TS30604.

Pneumatic Height Adjustment

To raise chair, lift body weight up and pull lever.

Arm Height

Pull trigger up and hold, pull arm up or push down and release trigger to lock.

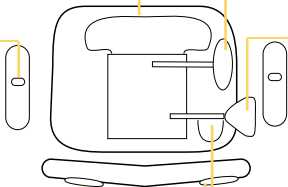

Tilt Tension

To decrease, turn counterclockwise. To increase, turn clockwise.

Back Height

Depress and hold both buttons, raise or lower back into desired position, release buttons.

Upright Back Lock

To release, lean forward and flip lever up. To lock, lean forward and flip lever down.

One final adjustment to make Let's B yours

Personalize your chair with your name on the back of this card – or use the built-in holder for your business card or favorite photo.

For more information, visit us at www.turnstonefurniture.com